

# MAGICFX Stage Propeller

Brief manual of the functions and settings

## Settings:

To install the addresses power up the Stage Propeller by plugging in the powerCON cable to the Stage Propeller and to an outlet capable of delivering 1,5kW of power at 230V AC.

Press the mode button to enter the menu. Choose your desired addresses by pushing the up and down buttons. Press the mode button again to confirm them. When done setting the addresses the addresses will be saved.

## Addresses:

Fan speed	Controls the speed of the stage propeller. (0 = off / 255 = full on)
Fan dir.	Controls the turning direction of the stage propeller (0-127 normal / 128-255 reverse)
LED red	Controls the intensity of the red LED's (0 = off / 255 = full on)
LED green	Controls the intensity of the green LED's (0 = off / 255 = full on)
LED blue	Controls the intensity of the blue LED's (0 = off / 255 = full on)
LED master	Controls the brightness of all the LED's together (0 = off / 255 = full on)
LED strobe	Controls the speed of the strobe (0 = off / 255 = full on)

## Troubleshooting:

The LED's won't go on:

Make sure you sending value's on the LED master and the LED strobe.

The LED's are on but the fan wont rotate:

Remove the power of the Stage Propeller wait 20 seconds and apply power again.